


**Indoor Wireless Night Vision Camera (ADC-V521IR)**

**Required Items for Installation:**

- ADC-V521IR camera (included)
- The camera's mini-USB to Ethernet cable (included)
- Broadband (Cable, DSL, or Fiber Optic) Internet connection with Wi-Fi router
- A Wi-Fi enabled computer, tablet or smartphone
- An Ethernet / Cat5 cable
- Login/Password for the customer's Alarm.com account
- The case-sensitive Wi-Fi SSID (wireless network name) and the network password

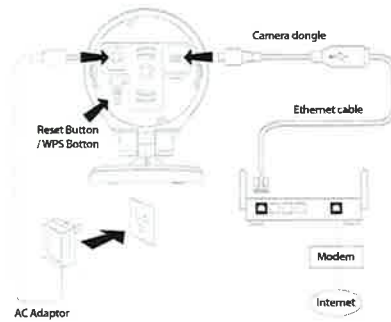

**Button Presses:**

- Press and hold the WPS button until the LED flashes **blue**, for WPS learn in mode
- Press and hold the WPS button until the LED flashes **red/green**, to reset the camera

**Install the Camera(s):**

1. Connect the camera's mini-USB to Ethernet cord (camera dongle) into the back of the camera.
2. Connect the camera to the router with an Ethernet cord.
3. Plug in the camera's AC adapter and plug it into a non-switched outlet
4. Wait for the camera LED to turn solid green
5. Either use Mobile tech to install the camera **OR** open a browser and type in: [www.Alarm.com/AddCamera](http://www.Alarm.com/AddCamera)
6. Find the camera on the page, or enter the camera's MAC which (shown on the camera and on the camera box) address to begin the installation

**Troubleshooting:**

- If you run into issues installing, try to power cycling the camera
- If issues persist, try factory default the camera by holding down the button on the back

	LED Status	Description
Install	All off	Power off
	Blinking <b>Red</b>	Power on, system booting
	<b>Green</b> blink every second	Local network connection with local IP address
	Solid <b>Green</b>	Full internet connection with Alarm.com IP
	Blinking <b>blue</b>	WPS learn-in mode
	Blinking <b>White</b>	Wi-Fi access point mode
Trouble Conditions	Solid <b>Red</b>	No local or Internet connection
	<b>Red</b> blink every 0.15 second + <b>Green</b> blink every 0.15 second	Restoring factory default settings

Questions?

Contact your security dealer with questions or issues. If you are a security dealer, find your Dealer Support contact number at the following website [www.alarm.com/dealersupport](http://www.alarm.com/dealersupport)

**EZ.INSTALL™**